


## How can I tell if my fifth wheel is fully locked?

If the wheel is a No-Slack® (5000 or 5092 Series) the locking jaw and wedge should be fully across the throat of the wheel. In addition, the bottom section of the (2) piece pull handle should be in and down behind the triangular piece located just inside the fifth wheel skirt.

### Fifth Wheel Fully Closed

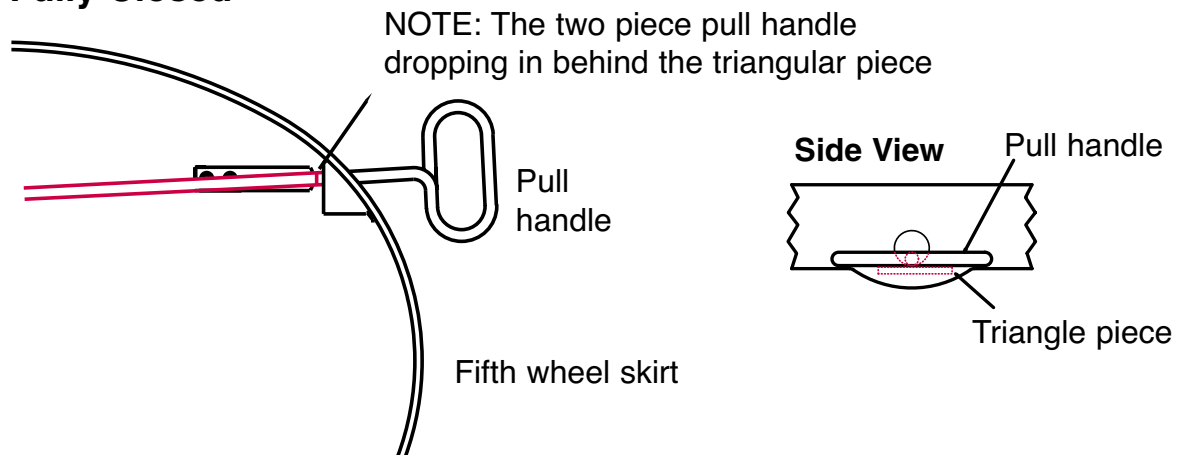

### Fifth Wheel Not Closed

