



## **AIR CYLINDER LEAKING**

### **COMPLAINT:**

Driver reports that the slider lock mechanism, or the air actuated king pin lock mechanism is not working properly.

### **CONDITION:**

The slider lock or the air actuated king pin lock mechanism is not opening/closing when actuated.

### **DIAGNOSIS:**

The air cylinder, the air lines or one of the fittings is leaking air.

### **THE CURE:**

Repair/Replace any component that is leaking air.

### **ADDITIONAL INFORMATION:**

1. Fontaine Fifth Wheel Instructions Handbook - Section II
2. Air Cylinder Identification Chart

### **TYPICAL ACTION DESCRIPTION:**

Inspected air cylinder and found air leak. Replaced fifth wheel air slide cylinder (or air actuated lock mechanism cylinder).

### **WARRANTY:**

See Warranty Standard; or Warranty Claim Procedure / SRT Chart for additional information.

### **GENERAL COMMENTS:**

Videos, Technical Bulletins and Instruction Handbooks for all necessary maintenance and repair of Fontaine Fifth Wheel products are available at no charge by calling (800) 874-9780.