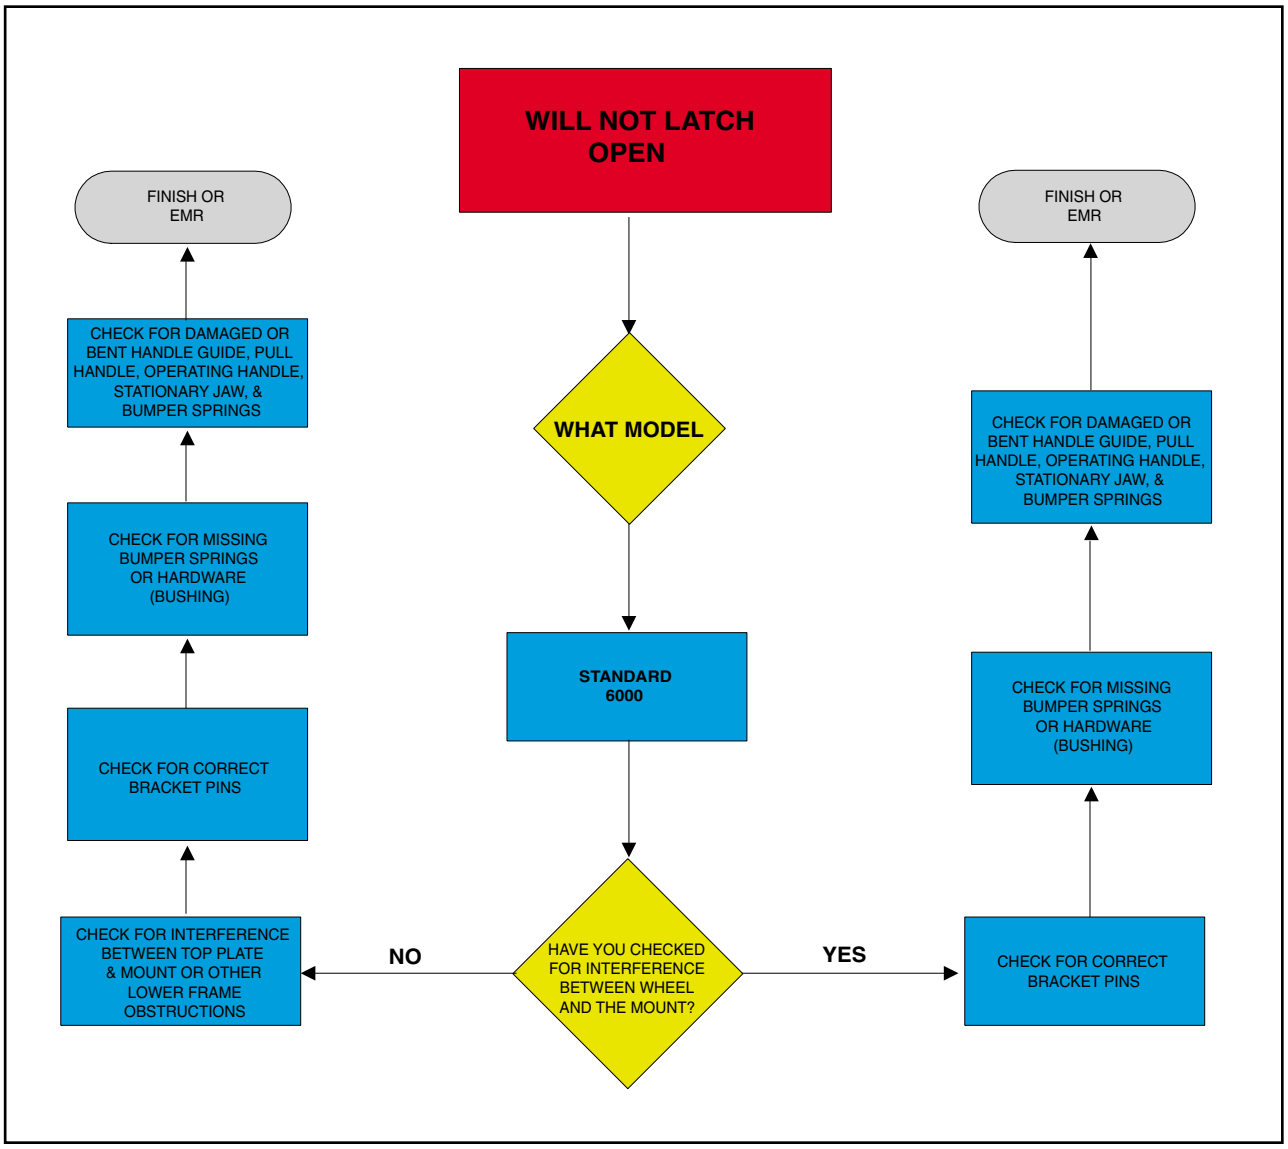
WILL NOT LATCH OPEN
WHAT MODEL
STANDARD 6000
HAVE YOU CHECKED FOR INTERFERENCE BETWEEN WHEEL AND THE MOUNT?
NO
YES
CHECK FOR INTERFERENCE BETWEEN TOP PLATE & MOUNT OR OTHER LOWER FRAME OBSTRUCTIONS
CHECK FOR CORRECT BRACKET PINS
CHECK FOR MISSING BUMPER SPRINGS OR HARDWARE (BUSHING)
CHECK FOR DAMAGED OR BENT HANDLE GUIDE, PULL HANDLE, OPERATING HANDLE, STATIONARY JAW, & BUMPER SPRINGS
FINISH OR EMR
CHECK FOR CORRECT BRACKET PINS
CHECK FOR MISSING BUMPER SPRINGS OR HARDWARE (BUSHING)
CHECK FOR DAMAGED OR BENT HANDLE GUIDE, PULL HANDLE, OPERATING HANDLE, STATIONARY JAW, & BUMPER SPRINGS
FINISH OR EMR