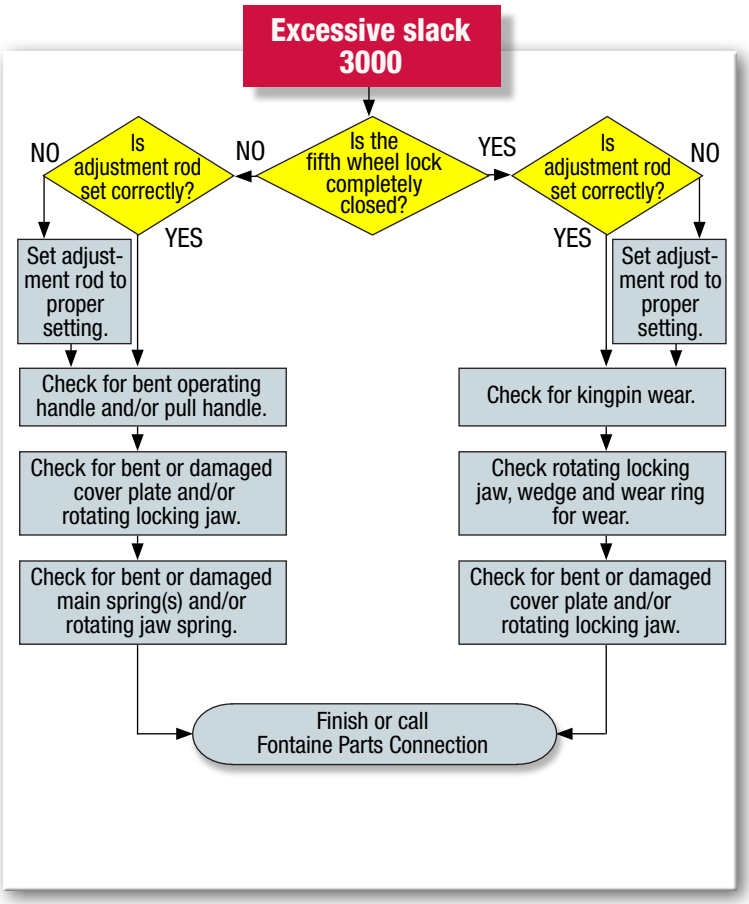
Excessive slack
3000
Is the fifth wheel lock completely closed?
NO
YES
Is adjustment rod set correctly?
NO
YES
Is adjustment rod set correctly?
YES
NO
Set adjust-ment rod to proper setting.
Set adjust-ment rod to proper setting.
Check for bent operating handle and/or pull handle.
Check for bent or damaged cover plate and/or rotating locking jaw.
Check for bent or damaged main spring(s) and/or rotating jaw spring.
Check for kingpin wear.
Check rotating locking jaw, wedge and wear ring for wear.
Check for bent or damaged cover plate and/or rotating locking jaw.
Finish or call
Fontaine Parts Connection