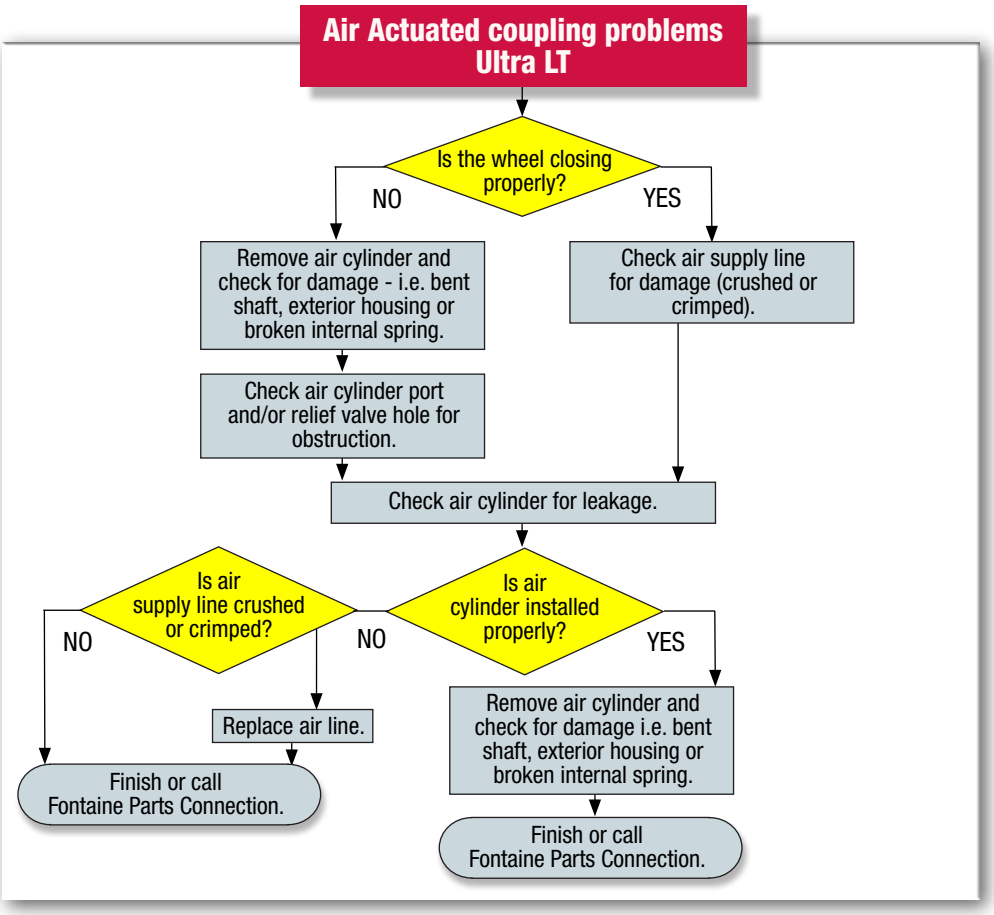
Air Actuated coupling problems
Ultra LT
Is the wheel closing properly?
NO
YES
Remove air cylinder and check for damage - i.e. bent shaft, exterior housing or broken internal spring.
Check air supply line for damage (crushed or crimped).
Check air cylinder port and/or relief valve hole for obstruction.
Check air cylinder for leakage.
Is air supply line crushed or crimped?
NO
NO
Is air cylinder installed properly?
YES
Replace air line.
Remove air cylinder and check for damage i.e. bent shaft, exterior housing or broken internal spring.
Finish or call Fontaine Parts Connection.
Finish or call Fontaine Parts Connection.