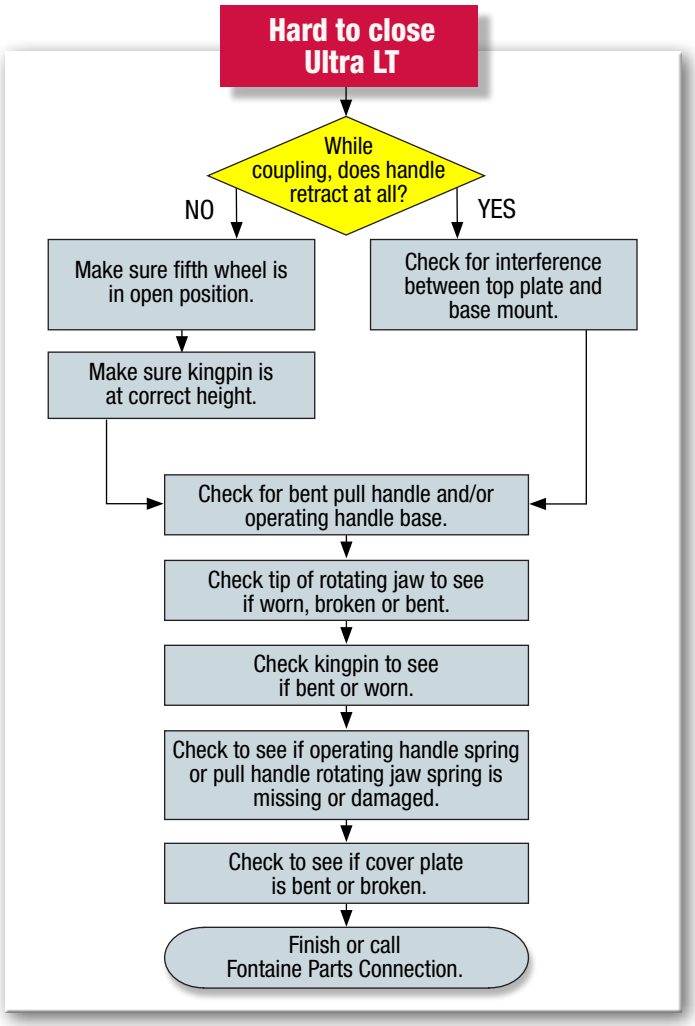
Hard to close Ultra LT
While coupling, does handle retract at all?
NO
YES
Make sure fifth wheel is in open position.
Check for interference between top plate and base mount.
Make sure kingpin is at correct height.
Check for bent pull handle and/or operating handle base.
Check tip of rotating jaw to see if worn, broken or bent.
Check kingpin to see if bent or worn.
Check to see if operating handle spring or pull handle rotating jaw spring is missing or damaged.
Check to see if cover plate is bent or broken.
Finish or call Fontaine Parts Connection.