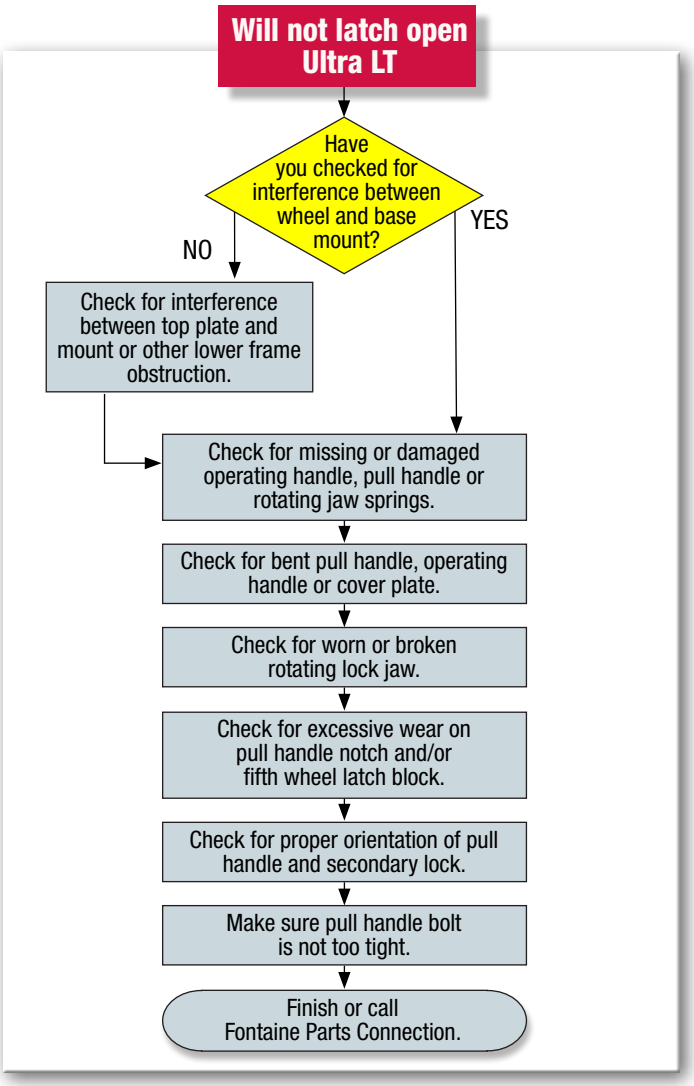
Will not latch open Ultra LT
Have you checked for interference between wheel and base mount?
NO
YES
Check for interference between top plate and mount or other lower frame obstruction.
Check for missing or damaged operating handle, pull handle or rotating jaw springs.
Check for bent pull handle, operating handle or cover plate.
Check for worn or broken rotating lock jaw.
Check for excessive wear on pull handle notch and/or fifth wheel latch block.
Check for proper orientation of pull handle and secondary lock.
Make sure pull handle bolt is not too tight.
Finish or call Fontaine Parts Connection.