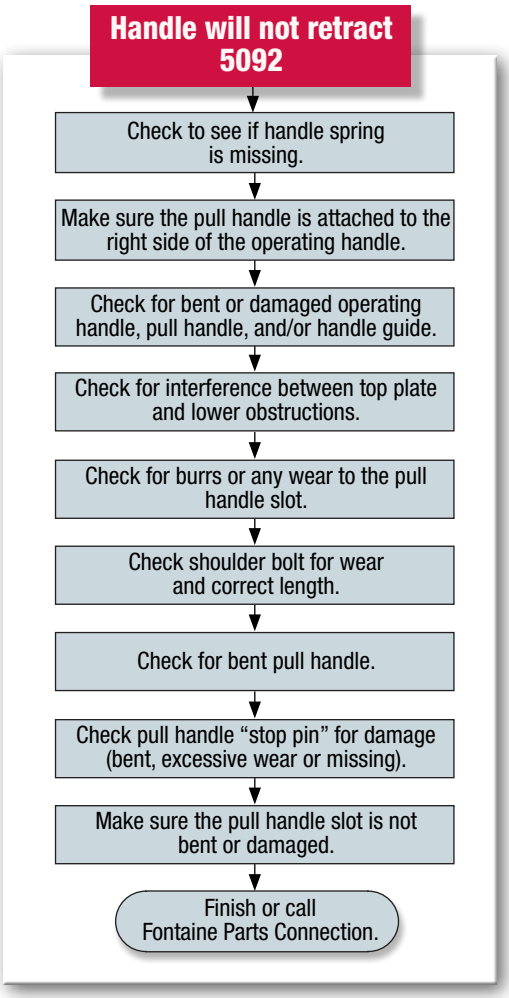
Handle will not retract
5092
Check to see if handle spring is missing.
Make sure the pull handle is attached to the right side of the operating handle.
Check for bent or damaged operating handle, pull handle, and/or handle guide.
Check for interference between top plate and lower obstructions.
Check for burrs or any wear to the pull handle slot.
Check shoulder bolt for wear and correct length.
Check for bent pull handle.
Check pull handle “stop pin” for damage (bent, excessive wear or missing).
Make sure the pull handle slot is not bent or damaged.
Finish or call Fontaine Parts Connection.