

Important Notice

Jaw & Wedge Pin Height are Not the Same For Fontaine No-Slack® II Fifth Wheels And 5092 Series Fifth Wheels


When changing the jaw and wedge of a Fontaine fifth wheel, please make sure that you are using the correct rebuild kit. The 5092 Series and the No-Slack® II kits are not the same and the parts included in the kits are not interchangeable.

To distinguish between the 5092 and 6000 models, a key figure is stamped into the jaw and wedge pins. Please make sure you are using the correct part by matching wheel model and key figure stamped onto the top of the pin.

Wheel Model	Key Figure Stamped on Pin
No-Slack® II Jaw	6 or 6J
No-Slack® II Wedge	6 or 6W
5092 Jaw	5 or 5J
5092 Wedge	5 or 5W

Please refer to the drawing on the back of this bulletin.

Comparison of Pin Height of 5092 Series and 6000 Series No-Slack® II Fifth Wheels

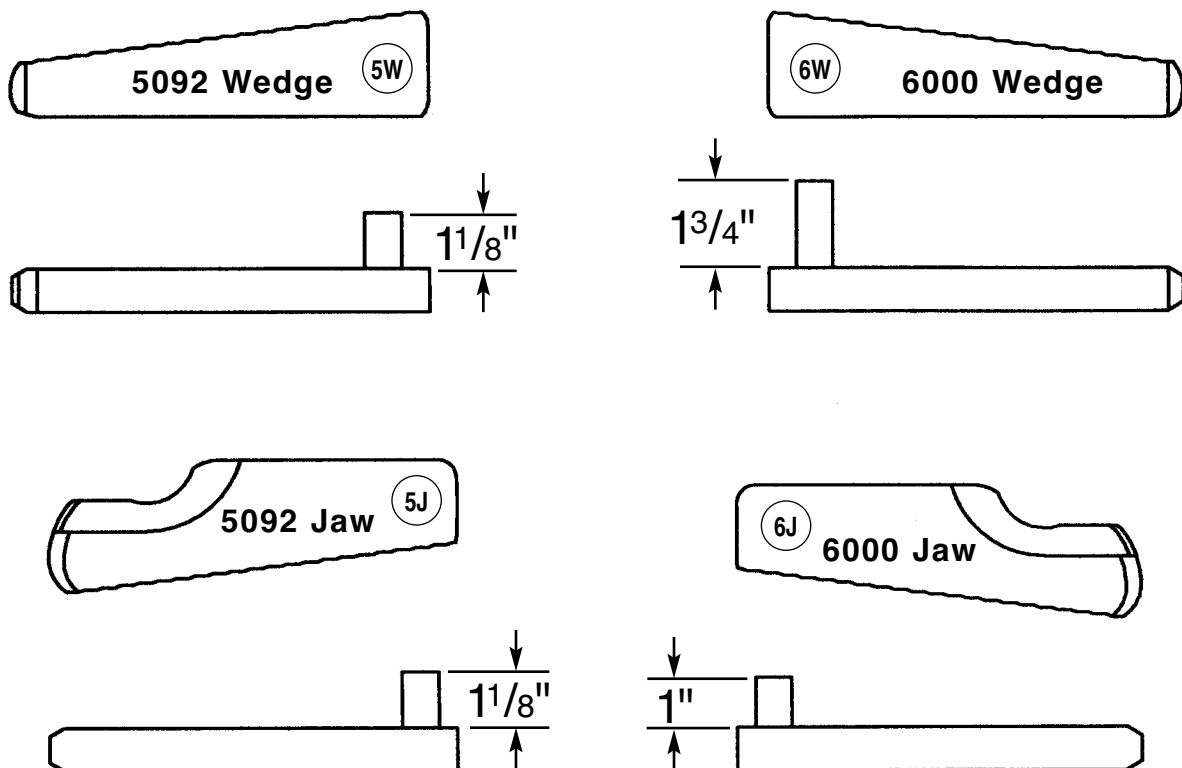

For 5092 Series parts, check for a "5" or "5J" stamped onto the jaw pin or a "5" or "5W" stamped onto the wedge pin.

For No-Slack® II Series parts, check for a "6" or "6J" stamped onto the jaw pin or a "6" or "6W" stamped onto the wedge pin.